



MODEL CX414 PORTABLE DUST COLLECTOR USER MANUAL



GENERAL SAFETY INSTRUCTIONS

Extreme caution should be used when operating all power tools. Know your power tool, be familiar with its operation, read through the owner's manual and practice safe usage procedures at all times.

- ❖ **CONNECT** your machine only to the matched and specific power source.
- ❖ **ALWAYS** wear safety glasses respirators, hearing protection and safety shoes, when operating your machine.
- ❖ **DO NOT** wear loose clothing or jewelry when operating your machine.
- ❖ **GROUND ALL TOOLS** if tool is equipped with three-prong plug, it should be plugged into a three-hole electrical receptacle. If an adapter is used to accommodate a two-prong receptacle, the adapter plug must be attached to a known ground. Never remove the third prong.
- ❖ **A SAFE ENVIRONMENT** is important. Keep the area free of dust, dirt and other debris in the immediate vicinity of your machine.
- ❖ **KEEP CHILDREN AND VISITORS AWAY.** All children and visitors should be kept a safe distance from work area.
- ❖ **NEVER** leave a tool unattended while the machine is in operation.
- ❖ **DON'T OVERREACH.** Keep proper footing and balance at all times.
- ❖ **DISCONNECT** the machine from the power source when changing drill bits, hollow chisels, router bits, shaper heads, blades, knives, or making other adjustments or repairs.
- ❖ **SECURE WORK.** Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.
- ❖ **BE ALERT! DO NOT** use prescription or other drugs that may affect your ability or judgment to safely use your machine.
- ❖ **MAINTAIN TOOLS IN TOP CONDITION.** Always keep the blades sharp and aligned. Follow instructions given in the user manual for lubricating and changing accessories.
- ❖ **DISCONNECT TOOLS** before servicing and when changing accessories such as blades, bits, cutters, etc.
- ❖ **ALWAYS** keep all safety guards in place and ensure their proper function.
- ❖ The dust generated by certain woods and wood products can be injurious to your health. **ALWAYS** operate machinery in well ventilated areas use wood dust collection systems whenever possible.

DUST COLLECTOR SPECIFIC SAFETY INSTRUCTIONS

Read and understand the instruction manual before operating the dust collector. Basic precautions listed below should always be followed when using your dust collector to reduce the risk of injury, electrical shock or fire.

- ❖ The CX414 is designed to collect sawdust only.
- ❖ **NEVER** attempt to use this dust collector to vacuum water or any other liquids.
- ❖ **NEVER** try to use this dust collector to collect large wood pieces.
- ❖ **NEVER** attempt to use this dust collector to collect metal materials such as screws, nails or other metal parts.
- ❖ **ALWAYS** wear respiratory and safety glasses when emptying dust from the collection bags.
- ❖ **NEVER** operate the dust collector with all blast gates closed.
- ❖ **ALWAYS** disconnect the dust collector from its power source when changing or emptying the bags.
- ❖ **ALWAYS** be sure that the collection and filter bags are securely fastened to collector body.
- ❖ **DO NOT** place your hand or tools nears the open inlet while operation. Serious personal injury or damage to the machine can happen.
- ❖ **ALWAYS** connect dust collector to the matched power source.

IMPORTANT!

The safety instructions given above can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.




CX414 FEATURES

MODEL CX414 – PORTABLE DUST COLLECTOR

As part of the growing line of Crafttex CX-Series woodworking equipment, we are proud to offer the CX414 a Portable Dust Collector. By following the instructions and procedures laid out in this owner's manual, you will receive years of excellent service and satisfaction. The CX414 is a professional tool and like all power tools, proper care and safety procedures should be adhered to.

- ❖ Motor 1.2 HP, 110 Volts, 8.2 Amps
- ❖ Rated Volume Flow 425 CFM
- ❖ Associated Vacuum 5" H2O
- ❖ Maximum Volume Flow 650 CFM
- ❖ Maximum Vacuum 9.4"
- ❖ Suction Hose Length 2500mm
- ❖ Suction Hose Diameter 100mm
- ❖ Suction Hose Connector 100mm
- ❖ Dust Bag Volume 16/18 Gallon
- ❖ Noise 90 dBA
- ❖ Weight 48.5 lbs
- ❖ Warranty 3 Years

PHYSICAL FEATURES

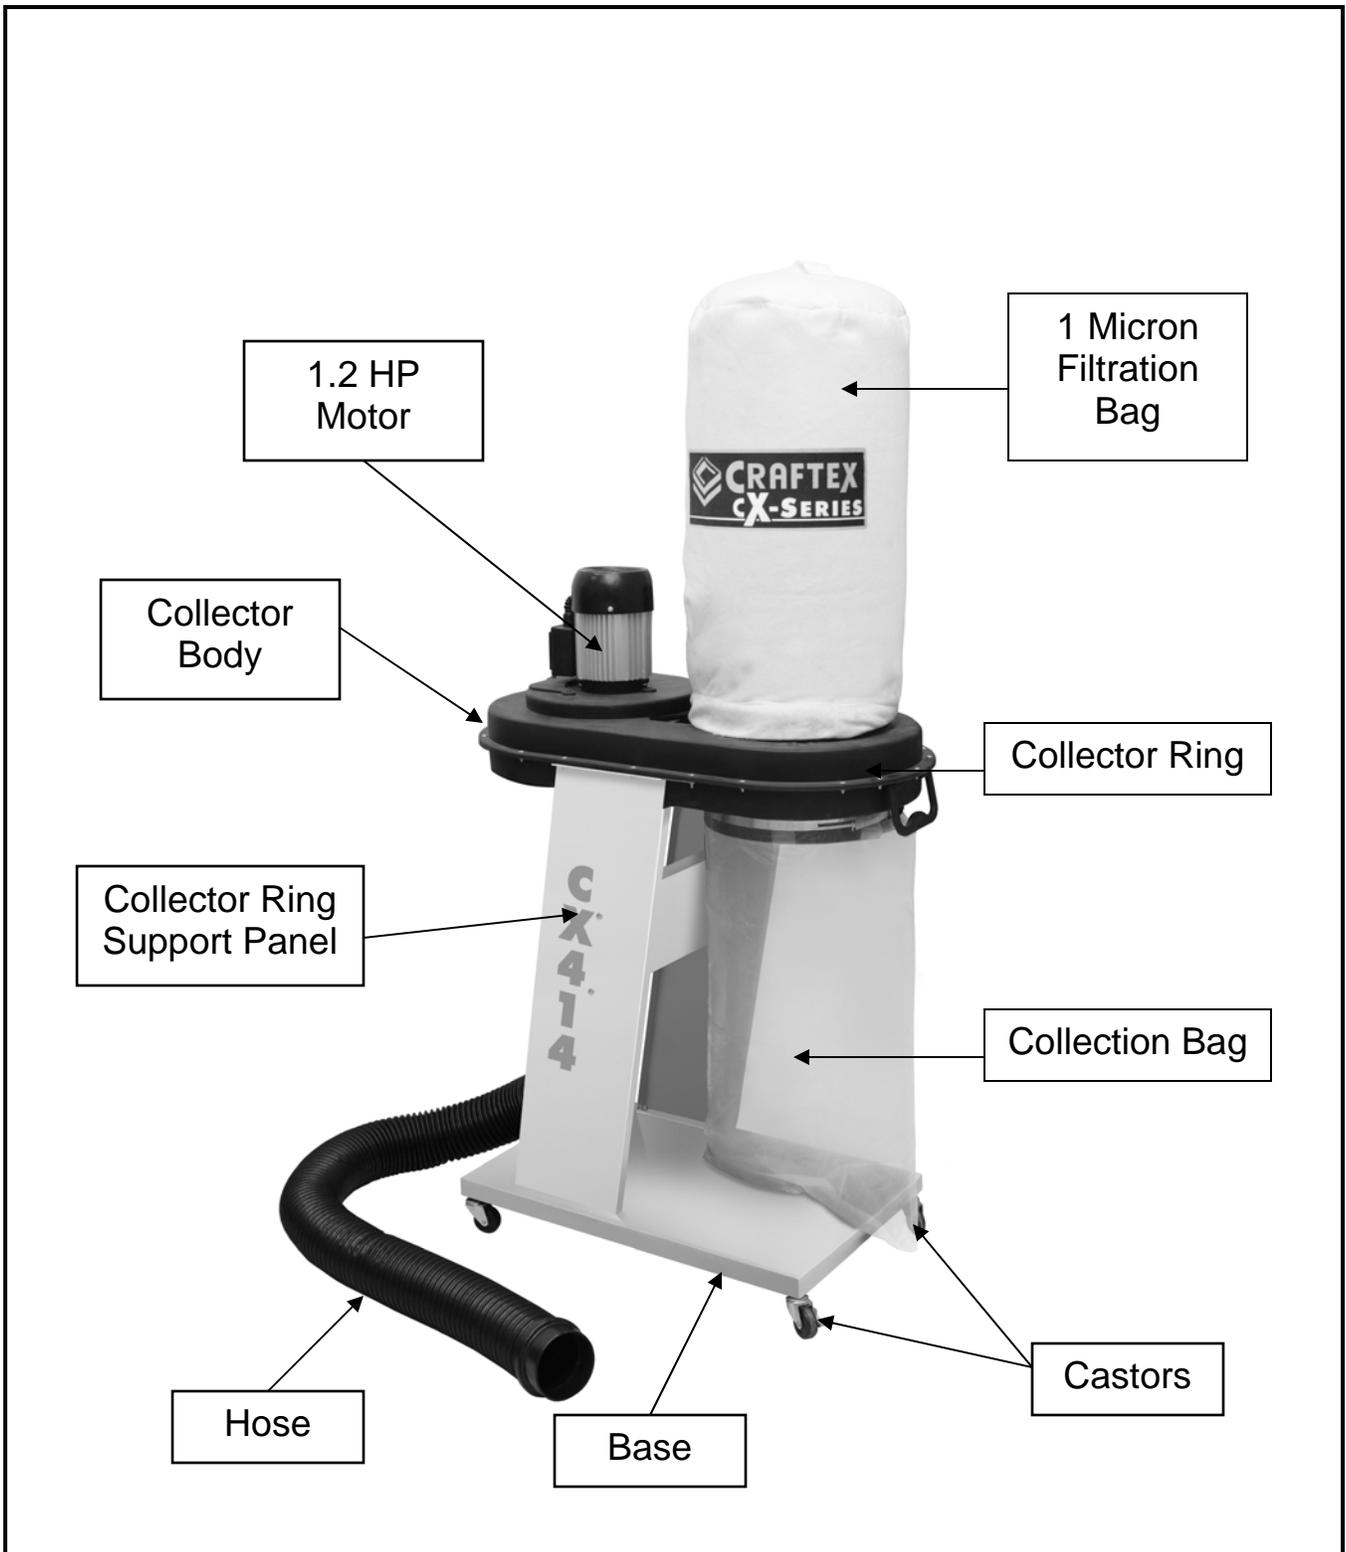

UNPACKING

The machine is properly packaged in a carton for safe transportation. When unpacking, carefully inspect the carton and ensure that nothing has been damaged during transit.

While doing the inventory if you can not find any part, check if the part is already installed on the machine.

CONTENTS

QTY

| | |
|------------------------------|---|
| A. Top Bag | 1 |
| B. Electric Motor..... | 1 |
| C. ON/OFF Switch | 1 |
| D. Fan Housing | 1 |
| E. Dust Collection Bag | 1 |
| F. Suction Hose | 1 |
| G. Transport Handle..... | 1 |
| H. Hardware Bag..... | 1 |
| I. Use Manual | 1 |

SETUP

Before setting up your machine you need to read and understand this user manual completely.

The CX414 features four casters installed to its base unit for easy mobility. If you want to use the CX414 as a stationary tool, do not install the casters and find an ideal spot where your dust collector will most likely be positioned.

Consider your complete work environment before placing your machine in the ideal spot.

PROPER GROUNDING

Grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

CX414 is for use on a normal 110 volt circuit. Make sure that the machine is connected to an outlet having the same configuration as the plug. If an adaptor plug is used, it must be attached to the metal screw of the receptacle. To prevent electrical hazards, have a qualified electrician ensure that the line is properly wired.

The dust collector should be wired with a plug having 3 prongs to fit a 3 prong grounded receptacle as shown in figure-2. Do not remove the grounding prong to fit it into a 2 pronged outlet.

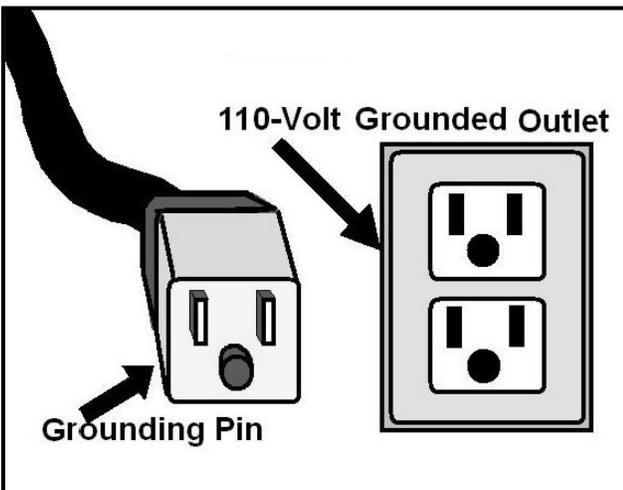


Figure-1 110-Volts outlet for CX414

It is strongly recommended not to use extension cords with your CX414. Always try to position your machine close to the power source so that you do not need to use extension cords.

In case if you really find it necessary to use an extension cord, make sure the extension cord does not exceed 50-feet in length and the cord is 14-gauge to prevent motor damage.

WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

ASSEMBLY

Follow the instructions below to assemble your CX414.

Place fan housing (7) with the motor facing down, on a workbench or similar stable support and set it level with a block of wood or similar. You can place the carton on the floor under the motor preventing it from getting scratched.

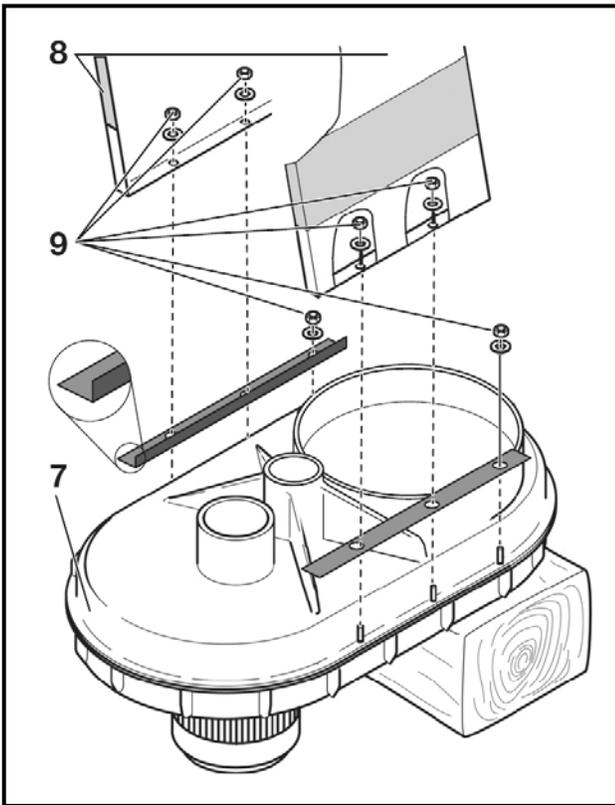


Figure-2 Fan housing

Loosen the 3 hexagon nuts and washers (9) shown on both sides of the ventilator housing. Mount the 2 plates as shown, on the bolts. Guide the two side panels (8) over the bolts with the adhesive label pointing outwards. Fit all washers and re-tighten all nuts on the ventilator housing.

Install the cross plate (10) between the side panels using carriage bolts and hex flange nuts.

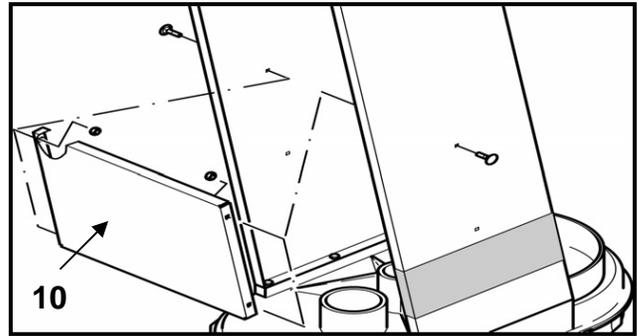


Figure-3 Installing the cross plate

Screw one castor (11) to each corner of the bottom panel and secure them using hex nuts (12) provided. See figure-4.

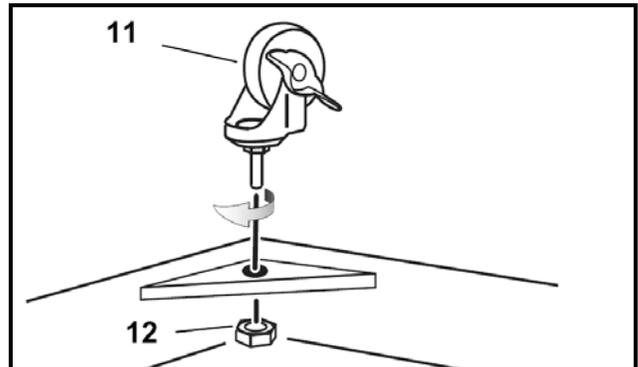


Figure-4 Installing the castors

Thread the earth-chain (13) into the bottom panel and secure it with a hex flange nut.

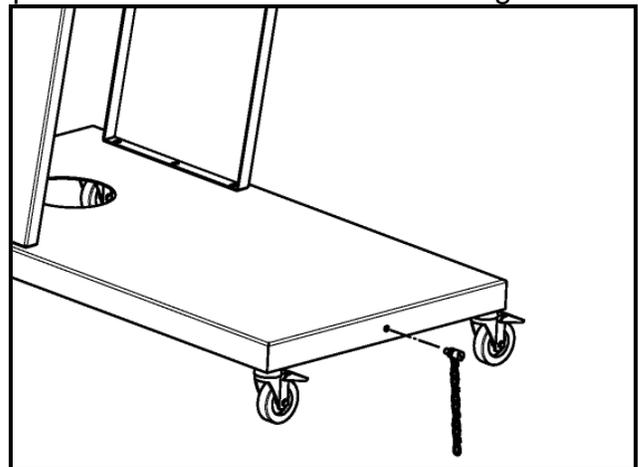


Figure-5 Threading the earth-chain

Place the bottom panel upside down on to the side panels and secure it using the carriage bolts and hex flange nuts provided. Make sure all the screws and nuts are tightened properly and position the machine upright with castors on the floor.

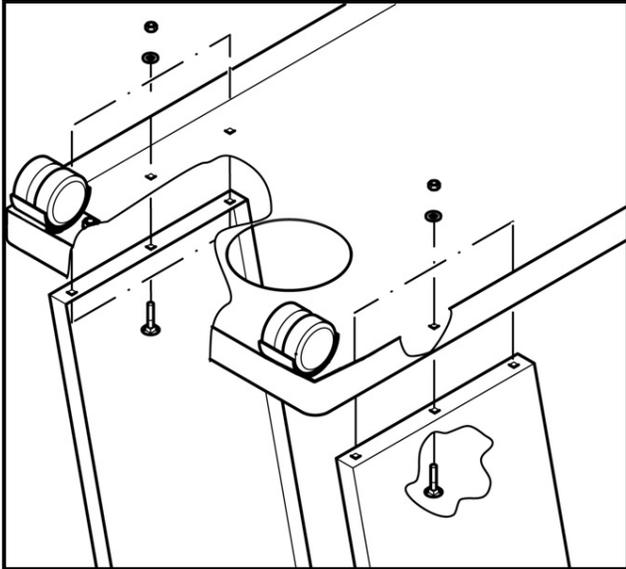


Figure-6 Attaching the bottom panel to the side panels

Attach the hose to the suction port and secure it using the hose clamp provided. See figure-7.

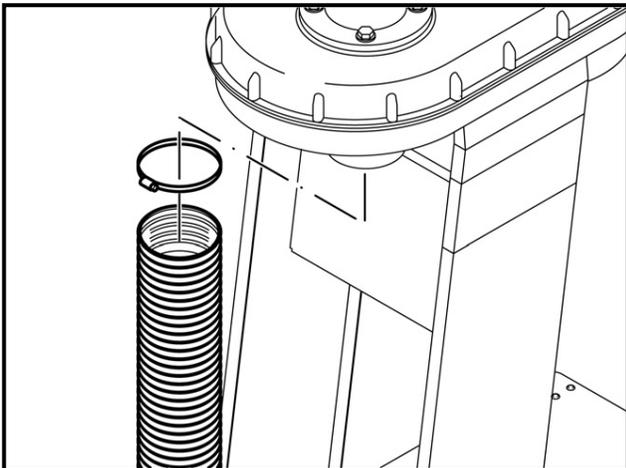


Figure-7 Attaching hose to the machine

Insert the rod into the two holes on the dust collector ring, shown in figure-8. Fit the dust

collector onto the ring and secure it using the bottom bag clamp. See figure-8.

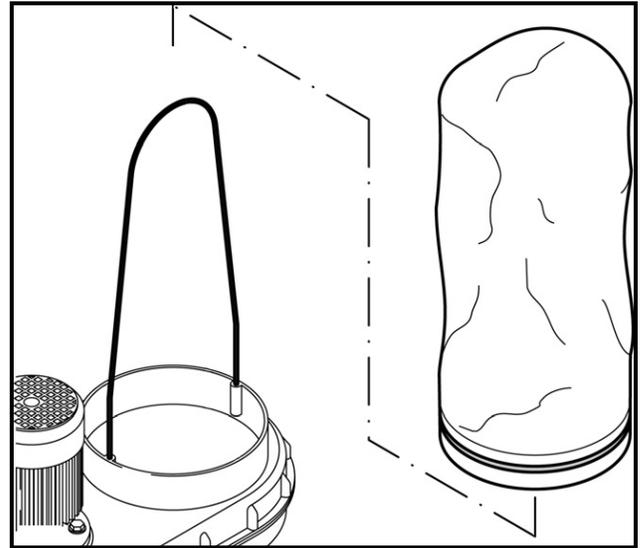


Figure-8 Installing the top bag

TEST RUN

Once you have assembled your dust collector, it is then time for a test run to make sure that the machine works properly and is ready to use.

Remove all the tools used for assembling the machine components. Walk around the machine, ensure all nuts, bolts, and screws are tightened and the machine is properly assembled. Connect the cord to the power source and turn the machine ON.

During the test run if there is any unusual noise coming from the machine or the machine vibrates excessively, turn OFF the power switch immediately and disconnect the cord from the power source. Investigate if you can find out the problem with your machine.

WARNING!

Before starting the machine, make sure that you have read and understood the user manual and you are familiar with the safety features of the machine. Failure to do so may cause serious personal injury.

OPERATION

Operating the CX414 dust collector is very simple and straightforward.

Make sure the dust collector is properly assembled and worked during the test run.

Move the CX414 close to the machine and use a proper sized hose connecting the hose with its one end to the machine and the other end to the dust collector.

Make sure the connections are secured using hose clamps and connect the ducting ground and the dust collector is ready for operation.

WARNING!

Do not use the CX414 for any other operation other than collecting sawdust. Failure to do so could result in malfunction of the machine and may void the warranty.

MAINTENANCE

Maintenance on this machine is fairly simple. Each time you use your dust collector, make sure to properly clean the bags and take a quick inventory of your machines performance. Check the dust collector regularly for loose bolts, screws, ensure the dust collection bag has no tears, and ensure all wires are in good condition.

BAG CLEANING

Empty the collection bag on a regular basis. The machine will run more efficiently if the collecting bag is emptied regularly.

REPLACING COLLECTION BAG

Disconnect machine from power.

Make sure you are wearing safety glasses and a respirator.

Release bag clamp securing collection bag, then unhook bag from collector.

Securely close top of bag and safely remove it.

Install new collection bag and secure it using the bag clamp.

REPLACING FILTER BAG

Disconnect machine from power.

Make sure you are wearing safety glasses and a respirator.

Release bag clamp securing filter bag, then unhook bag from collector.

Hold the bottom of the bag securely and remove it.

Install new filter bag and secure it using the bag clamp.


LUBRICATION

CX414 comes equipped with shielded bearings which are permanently lubricated. So, there is not need to lubricate them.

WARNING!

Do not make any adjustments while the machine is running. Turn off the machine and un-plug from the power source before making any adjustments.

PARTS BREAKDOWN

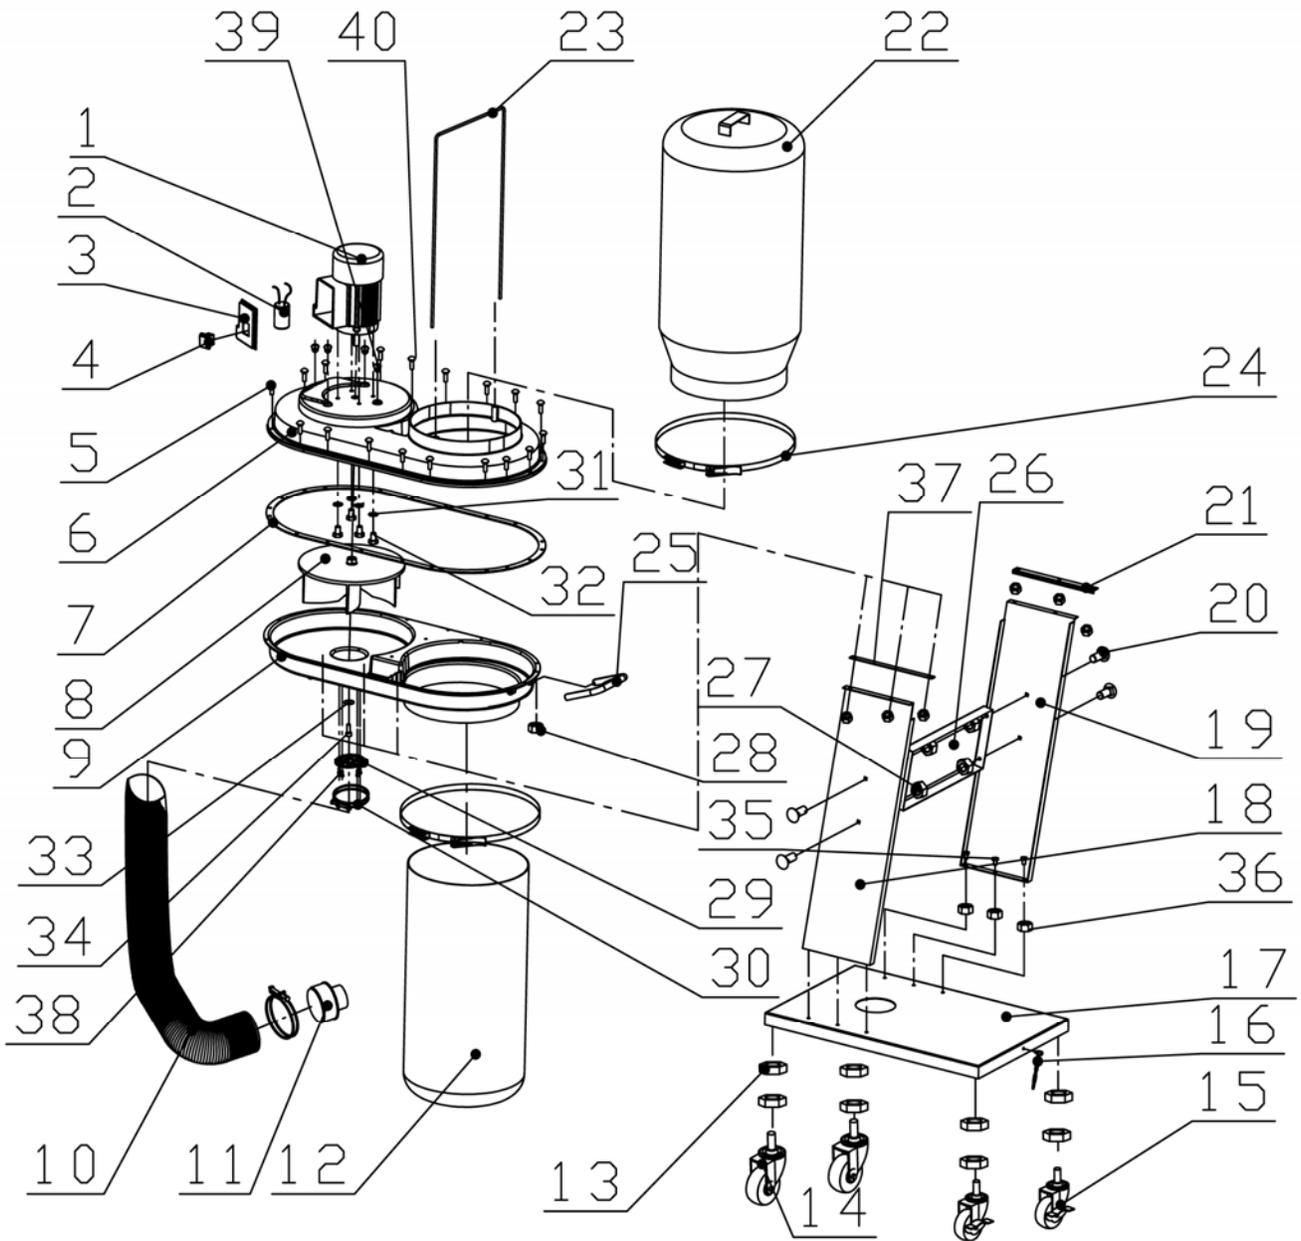

PARTS LIST

| S/N | Description | Spec. | Q'ty |
|-----|-------------------------|-------------|------|
| 1 | Motor | | 1 |
| 2 | Capacitor | CBB 30uf | 1 |
| 3 | Switch box cover | | 1 |
| 4 | Switch | DKLD AN01-1 | 1 |
| 5 | Dome screw | M5X16 | 14 |
| 6 | Upper blower housing | | 1 |
| 7 | Housing seal gasket | | 1 |
| 8 | Impeller | | 1 |
| 9 | Lower blower housing | | 1 |
| 10 | Hose | | 1 |
| 11 | Adapter | | 1 |
| 12 | Lower dust bag | | 1 |
| 13 | Hex nut | M10 | 8 |
| 14 | Caster | | 2 |
| 15 | Brake caster | | 2 |
| 16 | ground connection | | 1 |
| 17 | Base assy | | 1 |
| 18 | Left stand | | 1 |
| 19 | Right stand | | 1 |
| 20 | Dome screw | M8X12 | 4 |
| 21 | Connection plate 2 | | 1 |
| 22 | upper dust bag | | 1 |
| 23 | Bag support | | 1 |
| 24 | band clamp | | 2 |
| 25 | handle | | 1 |
| 26 | short beam | | 1 |
| 27 | hex nut | M8 | 4 |
| 28 | hex nut | M5 | 20 |
| 29 | inlet protective screen | | 1 |
| 30 | Wire clamp | | 2 |
| 31 | Star washer | D8 | 4 |
| 32 | hex bolt | M8X12 | 4 |
| 33 | Big flat washer | D6 | 1 |
| 34 | Hex socket screw | M6X16(Left) | 1 |
| 35 | hex bolt | M6X12 | 6 |
| 36 | Hex nut | M6 | 6 |
| 37 | Connection plate 1 | | 1 |
| 38 | Screw | ST4.2*12.7 | 4 |
| 39 | Cap | | 4 |
| 40 | Dome screw | M5X20 | 6 |



WARRANTY

CRAFTEX 3 YEAR LIMITED WARRANTY

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers **three years** for parts and 90 days for labour (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

Proof of purchase is necessary.

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras.

Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

RETURNS, REPAIRS AND REPLACEMENTS

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom or call 1-800-461-BUSY. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY (2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- We do not accept *collect* shipments.
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.