



MODEL CX212

10" CABINET TABLE SAW

USER MANUAL



COPYRIGHT © 2017 BY CRAFTEX INDUSTRIES INC.

NO PORTION OF THIS MANUAL MAY BE PRODUCED WITHOUT THE WRITTEN CONSENT OF CRAFTEX INDUSTRIES INC.



Version 1.0

TABLE OF CONTENTS

| | |
|--------------------------------------|-------|
| General Safety Instructions..... | 3 |
| Specific Safety Instructions..... | 4 |
| CX212 Features..... | 5 |
| Physical Features | 6 |
| Setup | 7 |
| Un-Packing | 8 |
| Proper Grounding | 8 |
| Assembly | 9 |
| Connecting to a Dust Collector | 12 |
| Test Run | 12 |
| Blade Installation..... | 13 |
| Blade Guard..... | 13 |
| Riving Knife..... | 14 |
| Work-piece Inspection | 14 |
| Main Table to Blade Parallelism..... | 15 |
| Tensioning the V-Belt..... | 15 |
| Replacing the V-Belt | 16 |
| Maintenance | 17 |
| Lubrication | 17 |
| Parts Breakdown & List..... | 18-23 |
| Warranty | 24 |

GENERAL SAFETY INSTRUCTIONS

Extreme caution should be used when operating all power tools. Know your power tool, be familiar with its operation, read through the owner's manual and practice safe usage procedures at all times.

- ❖ **ALWAYS** read and understand the user manual before operating the machine.
- ❖ **CONNECT** your machine ONLY to the matched and specific power source.
- ❖ **ALWAYS** wear safety glasses respirators, hearing protection and safety shoes, when operating your machine.
- ❖ **DO NOT** wear loose clothing or jewelry when operating your machine.
- ❖ **A SAFE ENVIRONMENT** is important. Keep the area free of dust, dirt and other debris in the immediate vicinity of your machine.
- ❖ **BE ALERT! DO NOT** use prescription or other drugs that may affect your ability or judgment to safely use your machine.
- ❖ **DISCONNECT** the power source when changing drill bits, hollow chisels, router bits, shaper heads, blades, knives or making other adjustments or repairs.
- ❖ **NEVER** leave a tool unattended while it is in operation.
- ❖ **NEVER** reach over the table when the tool is in operation.
- ❖ **ALWAYS** keep blades, knives and bits sharpened and properly aligned.
- ❖ **ALL OPERATIONS MUST BE** performed with the guards in place to ensure safety.
- ❖ **ALWAYS** use push sticks and feather boards to safely feed your work through the machine.
- ❖ **ALWAYS** make sure that any tools used for adjustments are removed before operating the machine.
- ❖ **ALWAYS** keep the bystanders safely away while the machine is in operation.
- ❖ **NEVER** attempt to remove jammed cutoff pieces until the saw blade has come to a full stop.

CX212 SPECIFIC SAFETY INSTRUCTIONS

- ❖ **NEVER** use a saw blade that has missing carbide teeth, loose teeth, or chipped or broken teeth.
- ❖ **NEVER** stand directly in line with the saw blade when feeding stock into the saw.
- ❖ **NEVER** place your fingers or hands in the line of cut. If you slip, your hands or fingers may come into contact with the blade. Always use a push stick when ripping narrow pieces.
- ❖ **NEVER** allow visitors or helpers to stand in line with the saw blade.
- ❖ **ALL GUARDS** must be in place while operating the table saw to ensure safety.
- ❖ **ALWAYS** feed the stock smoothly. Do not force or twist the work-piece while cutting.
- ❖ **NEVER** allow anyone to “assist” you by holding your work-piece at the out-feed end.
- ❖ **MAKE SURE** before making any adjustments, the switch is in the “OFF” position and the cord is un-plugged.
- ❖ **DO NOT** attempt to remove jammed pieces unless the table saw has come to a complete stop and the power switch has been turned to the OFF position and cord is unplugged.
- ❖ **NEVER** attempt to cut stock “freehand”, always use the rip fence or miter gauge.
- ❖ **ALWAYS** make sure that the rip fence is properly squared to the saw blade to prevent kickback.
- ❖ **ALWAYS** make sure that your saw is in a stable position. Cutting heavy, long stock may alter the stability of the saw. In the event that this may occur, the saw should be firmly bolted to the floor.
- ❖ **ALWAYS** be sure that if using a mobile base, wheels are firmly locked before turning the saw on.
- ❖ **ALWAYS** use a feather board and/or hold-downs to support your work-piece when necessary.
- ❖ **MAKE SURE** you have read and understood all the safety instructions in the manual and you are familiar with your table saw, before operating it. If you fail to do so, serious injury could occur.

WARNING!

The safety instructions given above can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.




CX212 - 10" CABINET TABLE SAW FEATURES

MODEL CX212 – 10" CABINET TABLE SAW WITH 30" FENCE

As part of the growing line of Craftex woodworking equipment, we are proud to offer CX212 a 10" Cabinet Table Saw. By following the instructions and procedures laid out in this owner's manual, you will receive years of excellent service and satisfaction. The CX212 is a professional tool and like all power tools, proper care and safety procedures should be adhered to.

- ❖ Motor 2HP, 120V, Single Phase
- ❖ Blade Guard Riving Knife, CSA Approved & UL897 Compliant
- ❖ Drive System "V" Belt Drive
- ❖ Rip Fence "T" Type Heavy Duty Rip Fence With Aluminum Face
- ❖ Fence Size..... L 35-3/4" x W 3-1/8" x H 2-7/16"
- ❖ Table Size..... 40-1/2" x 27" (with Extension Wings)
- ❖ Floor to Table Height 35-3/8"
- ❖ Arbor Tilt..... Left Tilting
- ❖ Arbor Diameter 5/8"
- ❖ Arbor Speed 3450 RPM
- ❖ Blade Size 10"
- ❖ Maximum Depth of Cut at 90°..... 3-1/4"
- ❖ Maximum Depth of Cut @ 45°..... 2-1/4"
- ❖ Dust Collection Port..... One 4" Port
- ❖ Approximate Weight 130 Kgs

CX212 – 10" CABINET TABLE SAW PHYSICAL FEATURES

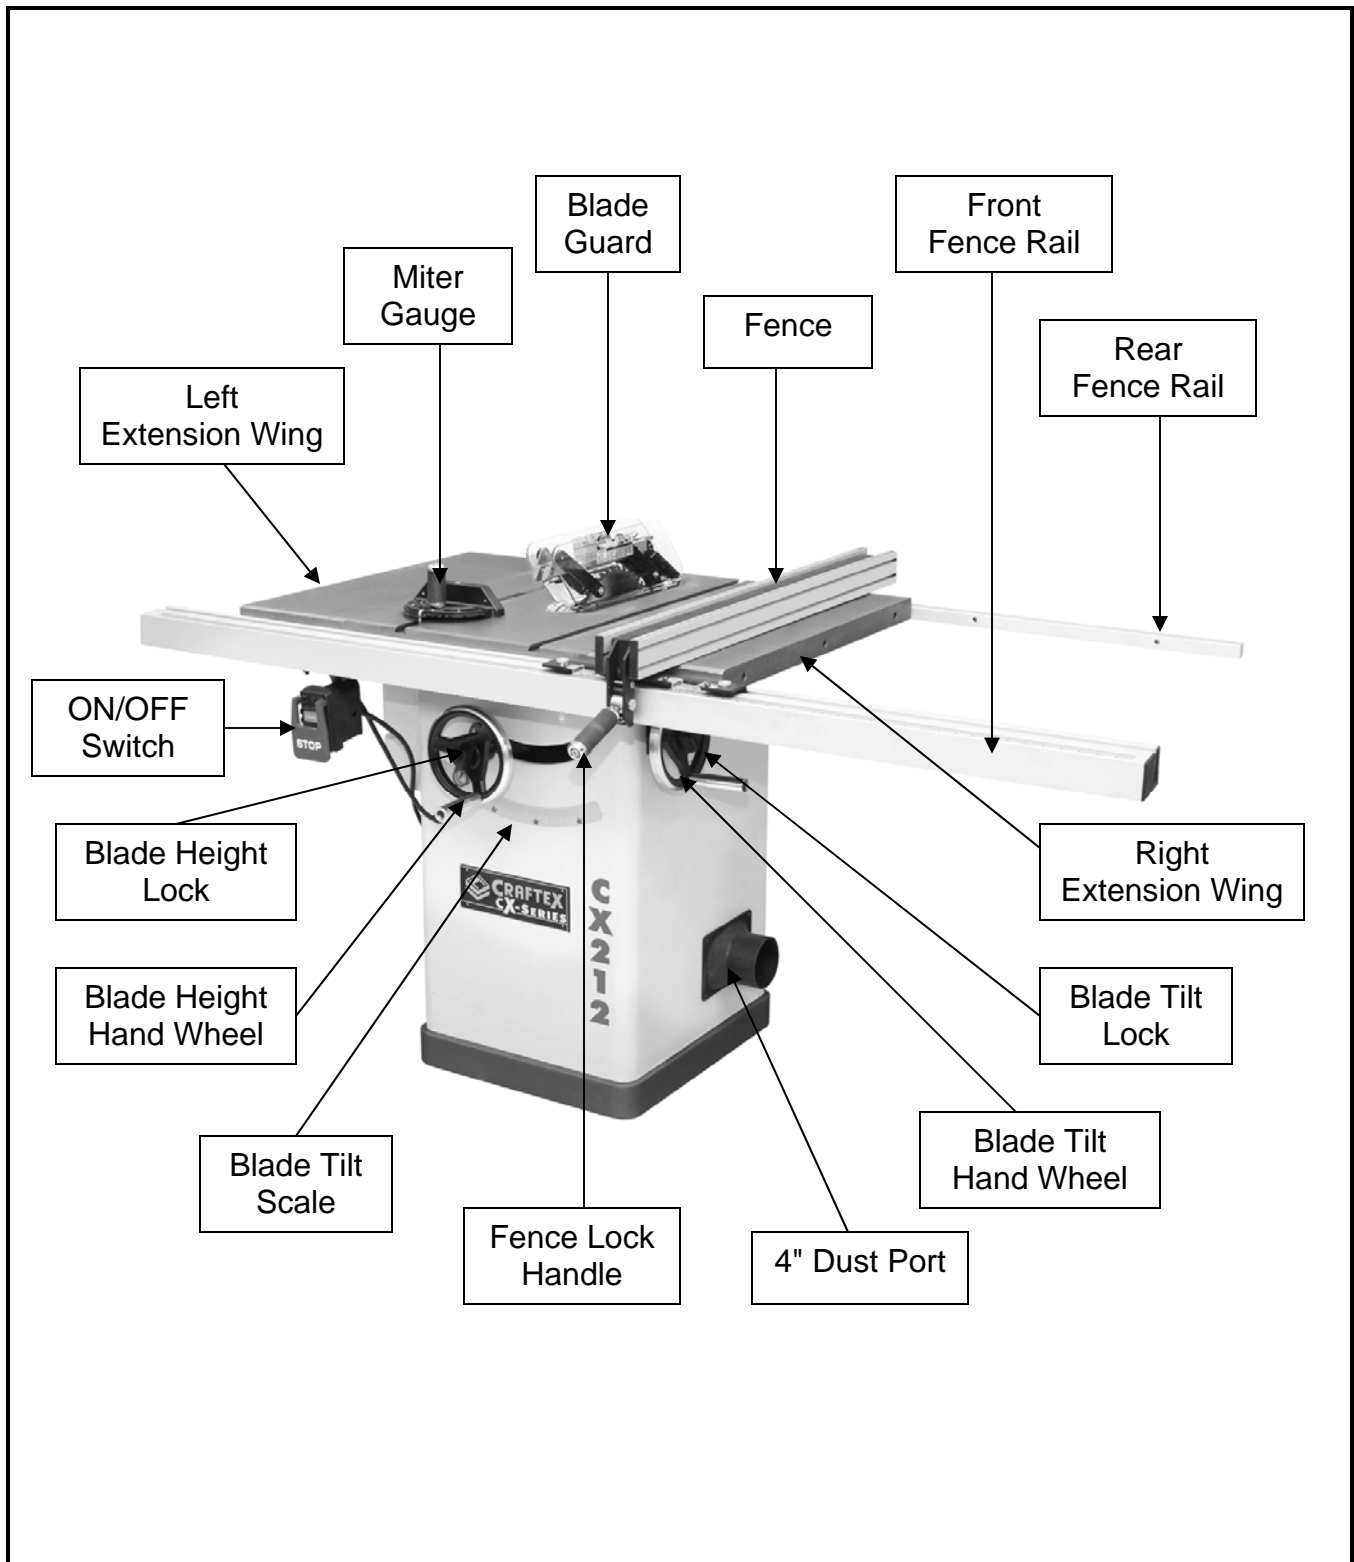

SETUP

Before setting up your machine you should read and understand the instructions given in this manual.

The unpainted surfaces of this table saw are coated with rust prevention waxy oil and you will want to remove this before you begin assembly. Use a solvent cleaner that will not damage painted surfaces.

WARNING!

CX212 is a very heavy machine, do not over-exert yourself. For safe moving method use fork truck or get the help of an assistant or friend.

UNPACKING

The machine is properly packaged and shipped completely in a crate for safe transportation. When unpacking, carefully inspect the crate and ensure that nothing has been damaged during transit. Open the crate and check that the machine is in a good condition.

LIST OF CONTENTS

| | |
|-----------------------------------|---|
| A. Table Saw..... | 1 |
| B. Table Extension Wings | 2 |
| C. Cabinet Door..... | 1 |
| D. Blade Guard Assembly | 1 |
| E. Table Insert..... | 1 |
| F. Dado Insert | 1 |
| G. Saw Blade 10" x 40T | 1 |
| H. Spreader | 1 |
| I. Push Stick..... | 1 |
| J. Miter Gauge | 1 |
| K. Miter Gauge Handle..... | 1 |
| L. Hand Wheels | 2 |
| M. Hand Wheel Knobs | 2 |
| N. Fence..... | 1 |
| O. Fence Handle | 1 |
| P. Front & Rear Fence Rails | 2 |
| Q. Fence Rail End Caps..... | 4 |
| R. Dust Port 4"..... | 1 |
| S. Hardware Bags | 2 |

PROPER GROUNDING

Grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

CX212 is for use on a normal 110 volt circuit. Make sure that the machine is connected to an outlet having the same configuration as the plug. If an adaptor plug is used, it must be attached to the metal screw of the receptacle. To prevent electrical hazards, have a qualified electrician ensure that the line is properly wired.

The sander should be wired with a plug having 3 prongs to fit a 3 prong grounded receptacle as shown in figure-1. Do not remove the grounding prong to fit it into a 2 pronged outlet.

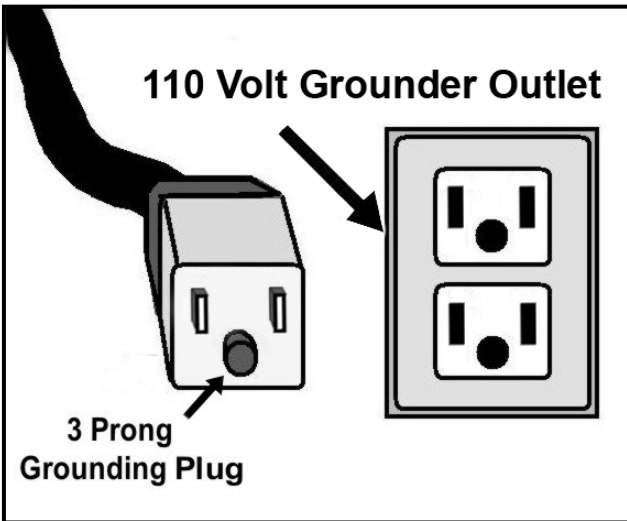


Figure-1 110 volts outlet for CX212

It is strongly recommended not to use extension cords with your CX212. Always try to position your machine close to the power source so that you do not need to use extension cords.

In case if you really find it necessary to use an extension cord, make sure the extension cord does not exceed 50-feet in length and the cord is 14-gauge to prevent motor damage.

ASSEMBLY

Follow the instructions given below to assemble your CX212 table saw.

Install the hand wheels onto the shafts and make sure the notch in each wheel fits over the pin on each shaft. Secure the knobs. See figure-2.

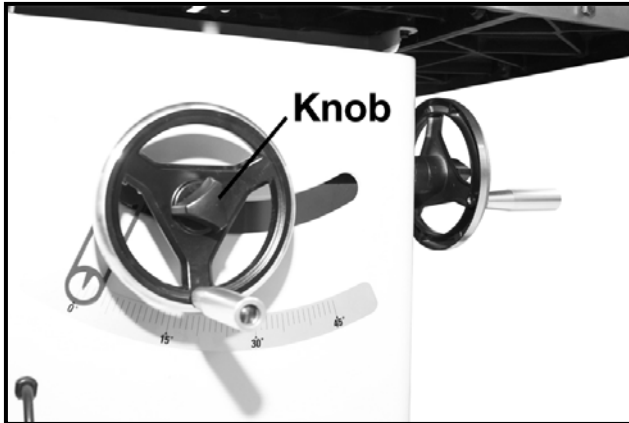


Figure-2 Installing the hand wheels

Remove all the screws from the end of the main table and clean mating surfaces of the main table and the extension wings. Make sure there is no debris or any foreign material on the mating surfaces of the main table and the extension wing which can cause misalignment and the wings can not be properly attached to the table.

Attach the extension wings to the table using the screws removed from the main table, finger tighten for now. Place a straightedge across the extension wings and the main table to make sure that the extension wings surface is flat with the main table. See figure-3.

IMPORTANT!

If the outside end of the extension wings tilts down or up, use a strip of masking tape to align it with the main table.

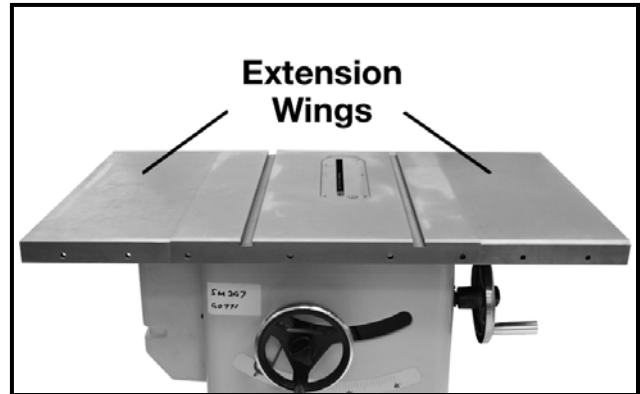


Figure-3 Installing the extension wings

Attach motor cover to the saw cabinet using screws provided. See figure-4.



Figure-4 Installing the motor cover

Remove the two hex bolts from the switch bracket and insert into the bottom slot of the fence rail. See figure-5. This will be used to mount the switch later.

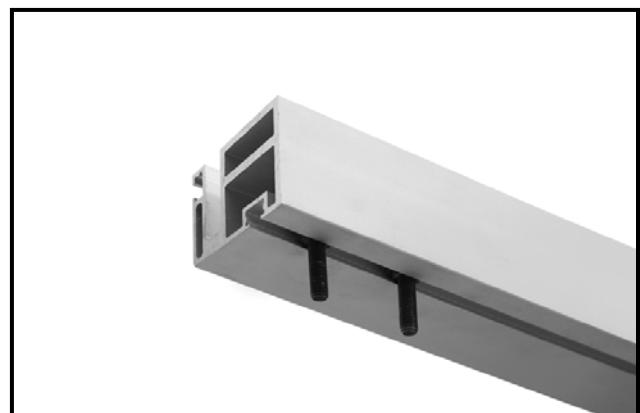


Figure-5 Bolts for mounting switch

Install the end cap on the left end of the front fence rail. See figure-6.

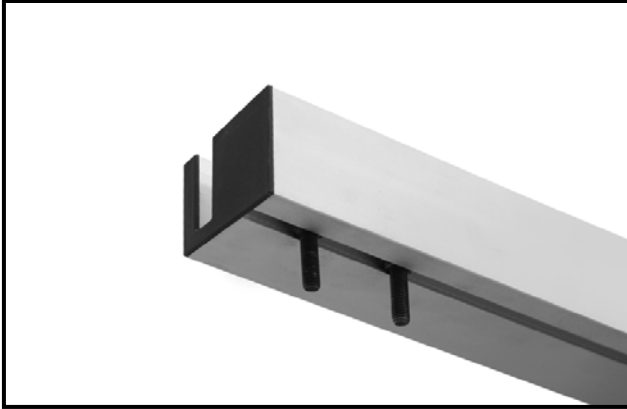


Figure-6 Installing the end cap onto the rail

Slide eight hex bolts into the open slot on the fence rail. See figure-7.

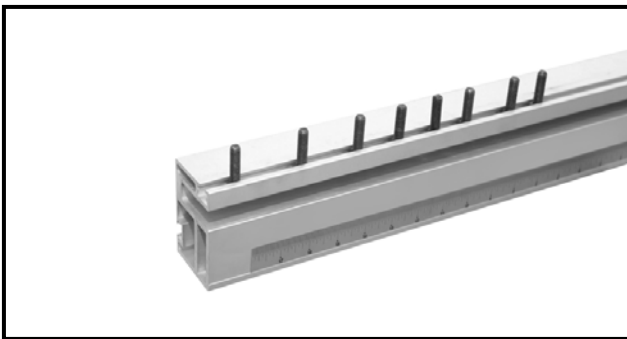


Figure-7 Inserting bolts into the slot on the front fence rail

Align the hex bolts with the hole on the table and extension wings and insert them into the holes. Hand tighten the hex bolts.



Figure-8 Installing the front fence rail

Install the switch onto the hex bolts previously inserted into the fence rail slot. See figure-8.



Figure-8 Installing the switch

Attach the rear fence rail on the rear of the table and extension wings and secure it using cap screws provided. See figure-9.



Figure-9 Installing the rear fence rail

Install the table insert onto the table opening and make sure it is flush with the table surface. See figure-10.



Figure-10 Installing the table insert

Place the fence on the fence rails and press the handle down to lock the fence in position. See figure-11.

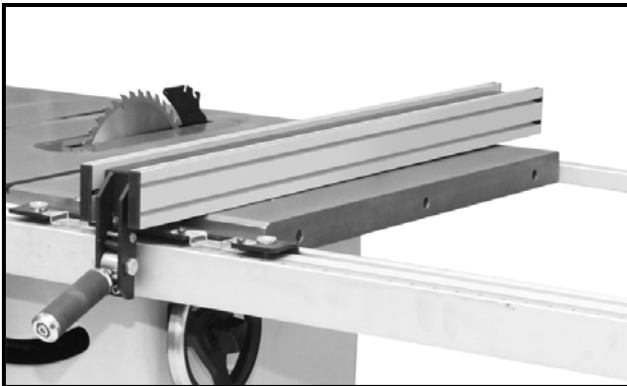


Figure-11 Installing the fence

Loosen the lock lever shown in figure-12.

Insert the spreader into the mounting block and tighten the lock lever. See figure 12.

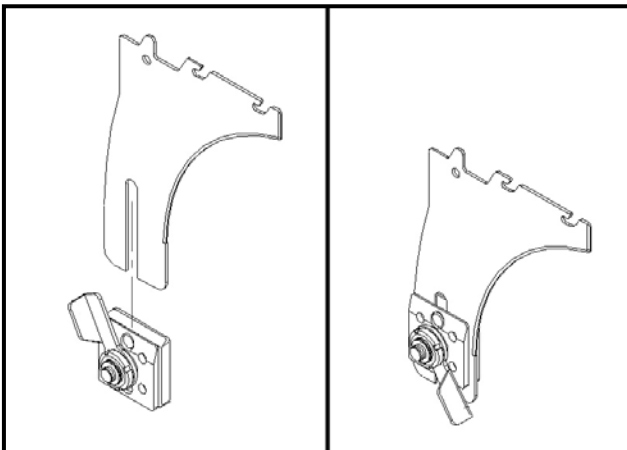


Figure-12 Using the knob to secure the spreader

Make sure the spreader is locked properly.

Install the blade guard on the spreader and lock it in position by tightening the lock lever.

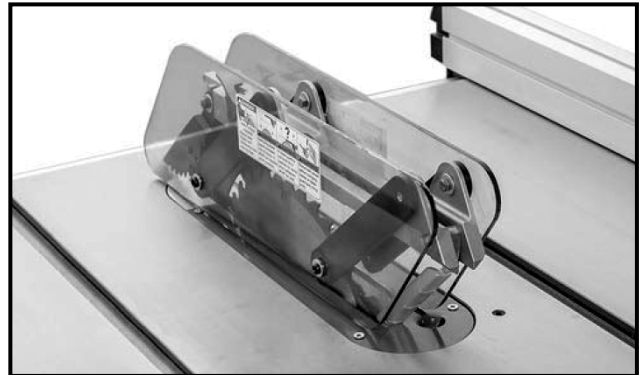


Figure-13 Installing the blade guard

Install the dust port to the table saw cabinet and secure it using screws provided. See figure-14.



Figure-14 Installing the dust port

CONNECTING TO A DUST COLLECTOR

CX212 features a 4" diameter dust port to connect to a dust collector.

When connecting to a dust collector, use a proper sized hose and make sure all the connections are sealed tightly.

It is recommended to use a proper sized dust collector with the CX212 to ensure adequate dust collection.

WARNING!

The fine dust particles produced by the table saw can go into your lungs and cause serious respiratory problems. Make sure to wear a dust mask and connect the table saw to a proper dust collection system while operating it.

TEST RUN

Once you have assembled your machine completely, it is then time for a test run to make sure that the machine works properly and is ready for operation.

During the test run if there is any unusual noise coming from the machine or the machine vibrates excessively, stop the machine immediately and disconnect from the power source and investigate to find out the problem with your machine.

WARNING!

Before starting the table saw, make sure that you have read and understood the manual and you are familiar with the functions and safety features on this machine. Failure to do so may cause serious personal injury.

To test run the machine:

Make sure you have read the safety instructions given in the manual and your machine is set up properly.

Lower the blade all the way down and make sure all tools used for setup are removed from the machine.

Connect the machine to the correct power source.

Turn the machine ON and verify that the machine runs smoothly without any problems or noises.

If the machine starts, immediately stop the machine. The switch disabling feature is not working properly. This needs to be fixed before operating the table saw.

WARNING!

The safety instructions given in this manual can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.

BLADE INSTALLATION

Disconnect the cord from the power source.

Raise the arbor all the way up and remove the blade guard, table insert and spreader.

Loosen the remove the arbor nut using the arbor nut, flange, and blade. See figure-15.



Figure-15 Installing the blade

Install the new saw blade, flange and arbor nut on the arbor and tighten the nut.

Reinstall the spreader, table insert and blade guard.

BLADE GUARD

The blade guard assembly on your CX212 consists of a clear polycarbonate shield, spreader and anti-kickback pawls.

The clear polycarbonate guard allows the operator to see the blade cutting the work-piece during cutting operation. The guard covers the blade on both sides and lifts up as the work-piece is fed into the blade and returns to the table surface when the work-piece has passed through the blade. It prevents the wood chips to fly and injure the operator and it also prevents from accidental contacts of objects with the blade.

At the back side of the guard there is a metal plate called a spreader. The spreader prevents the kerf of the work-piece from pinching the blade and causing kick back. The kick back pawls are designed such that they allow the work-piece to move only forward. During the cutting operation if the work-piece moves backward, the anti kick back pawls will dig into it and stop it.

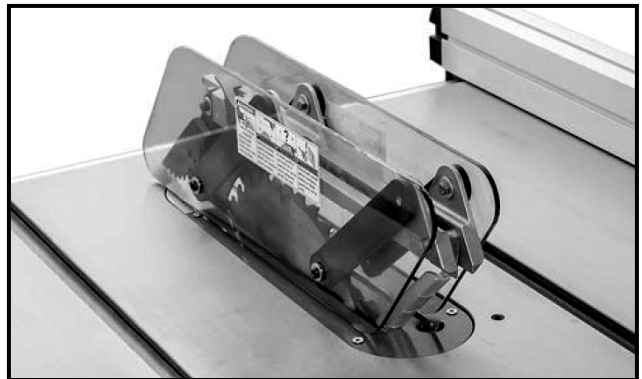


Figure-16 Blade guard assembly

RIVING KNIFE

The riving knife is a metal plate which prevents the newly cut work-piece from pinching at the backside of the blade and causing kickback. Basically the riving knife does the same job as the spreader. But the main difference is that the riving knife is installed below the blade height while the spreader is installed higher than the blade.

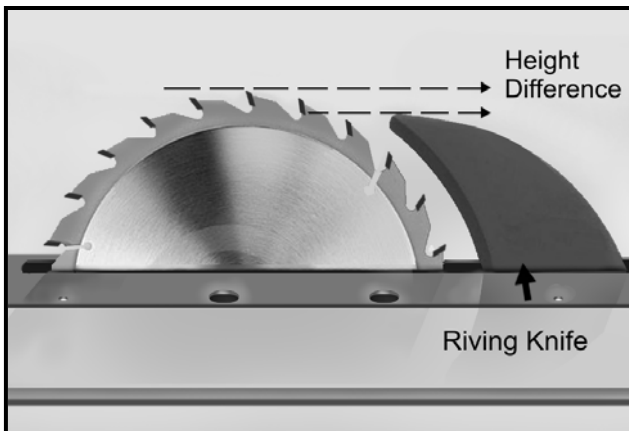


Figure-17 Riving knife

The riving knife is installed when doing non-through cuts using a standard table saw blade and for the cutting operations when the blade does not cut all the way through thickness of the work-piece.

WARNING!

DO NOT use the riving knife with dado blades. If used, the riving knife will be higher than the dado blade and the work-piece will hit the riving knife.

HEIGHT DIFFERENCE

The riving knife should be installed with 1mm to 5mm height difference with the blade height. It is recommended to keep 3mm to 8mm distance between the blade (from the carbide tip) and the riving knife.

WORK-PIECE INSPECTION

Before cutting the work-piece, make sure to inspect it for nails, staples, small pieces of stone or metal and any other object which is dangerous to come on contact with the blade.

If the wood contains any of these objects and it comes in contact with the blade, the object might fly and hit the operator or seriously damage the blade. For a safe cutting method always inspect your work-piece carefully before cutting and wear eye protection.

Some woods with excessive twisting or wrapping are unstable while cutting. This situation can be dangerous, because during operation the work-piece can move unexpectedly which can either damage the blade or hurt the operator.

If the wood is slightly cupped, make sure the cupped face of the wood is held against the table or the fence. If the bowed side of the work-piece is held against the table or the fence, there will be a great possibility that the work-piece move unexpectedly while cutting, and cause kickback or injury to the operator.

Some stock with large knots can damage the blade and wet stock will give a poor result.

WARNING!

The information above is just a guideline for you to understand how to cut a work-piece with slight cupping. If you are not sure and do not have any experience in cutting cupped stock, do not cut it. Failure to follow these instructions might bring personal injuries to the operator or serious damage to the blade.

MAIN TABLE TO BLADE PARALLELISM

Your CX212 will give a better result if the main table is parallel to the blade. If it is not parallel, the result you will get will be poor and low quality.

To check if the table is parallel to the blade, use an adjustable square and measure the distance between the miter slot on the table and the edge of the blade (front or back) as shown in figure-18.



Figure-18 Measuring the distance using an adjustable square

Now, lock the square in place and mark the blade with a marker where you made the measurement. Rotate the blade so that the mark is opposite to the first position (front or back) and slide the square to check if the blade is at the same distance with the miter slot.

The measurement should be equal on both sides. If the measurements are not the same, the table needs to be adjusted parallel to the blade.

TO ADJUST THE TABLE

Make sure the switch is in the "OFF" position and the cord is unplugged from the power source.

Loosen the four mounting bolts (under the table) securing the table on the cabinet and adjust the table to get equal measurements on both sides of the blade. Once the table is parallel to the blade, retighten the mounting bolts.

TENSIONING THE V-BELT

The belt stretches with use and needs to be checked and tensioned properly as the table saw is used.

Remove the cord from the power source.

Raise the blade to two inches above the table and open the motor cover. Loosen the hex nuts securing the motor as shown in figure-19 and move the motor slightly up and down.



Figure-19 Belt tensioning hex bolt

Check the tension on the V-belt and press the motor down to tension the belt.

Once there is approximately 1/2" deflection in the belts when applying moderate pressure using your finger, re-tighten the hex nuts.

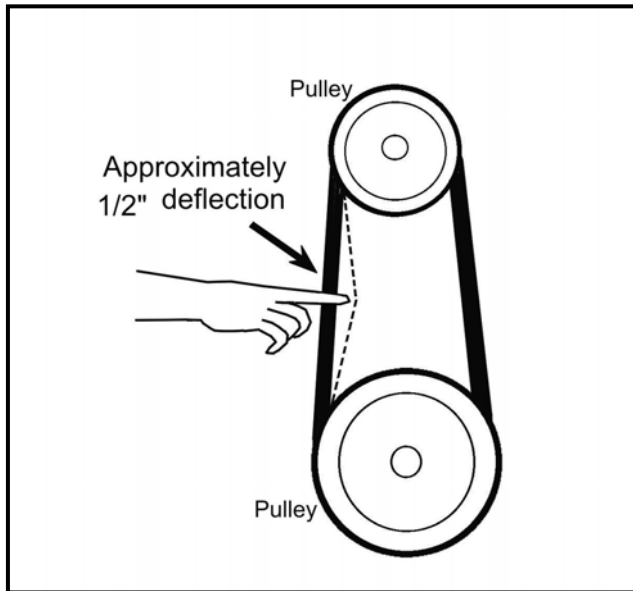


Figure-20 Correct tension on the V-belt

REPLACING THE V-BELT

Turn the table saw switch "OFF" and remove the cord from the power source.

Remove the motor cover from the side of the machine.

Set the blade to 0° on tilt scale and raise the blade around 2" above the table.

Loosen the hex bolt shown in figure-19 and remove belt.

Install the new belt onto the pulleys.

Lower the motor until it begins to pull the belt down with it.

When the belt is correctly tensioned, tighten the hex nut and close the motor cover.

MAINTENANCE

During the life of your machine, you will need to practice some regular maintenance to keep your sander in peak performance condition.

WARNING!

Make sure the machine's power switch is OFF and the cord is disconnected from the power source when installing / removing any part or servicing the table saw.

Check the machine for any loose mounting bolts, damaged blade, work or damaged wires or any other unsafe condition daily before use.

Regularly vacuum all sawdust from the saw's interior and vacuum the motor openings as well.

The unpainted components such as the precision-ground cast-iron table top should be protected with a coat of paste wax and then buffed dry.

Check drive belts for wear and correct tension on a regular basis.

Check that the blade guard and anti kickback pawls operate properly.

LUBRICATION

It is important to clean the parts before lubricating them.

Apply a thin layer of grease to the lubricating locations shown in the following figures.

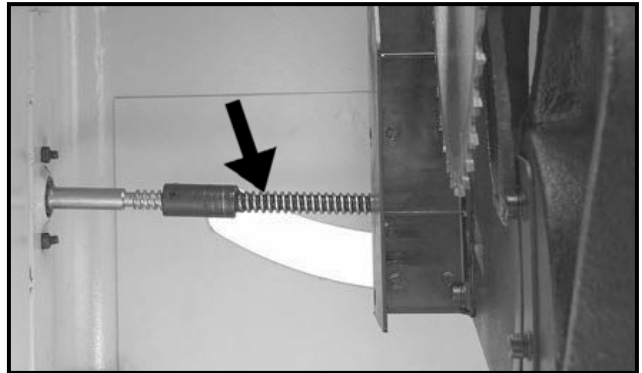


Figure-21 Lubricate lead screw


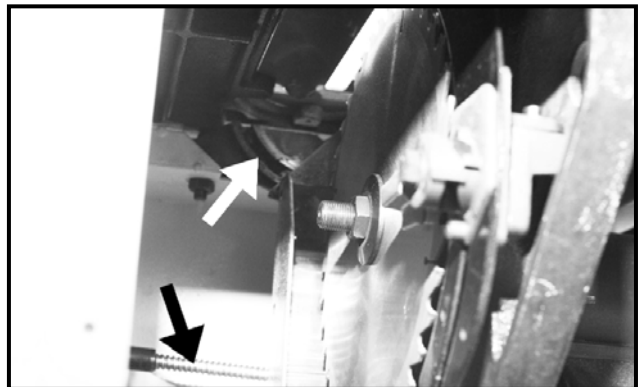



Figure-22 Lubricate worm gear and trunnion slide

CX212 PARTS DIAGRAM & PARTS LIST

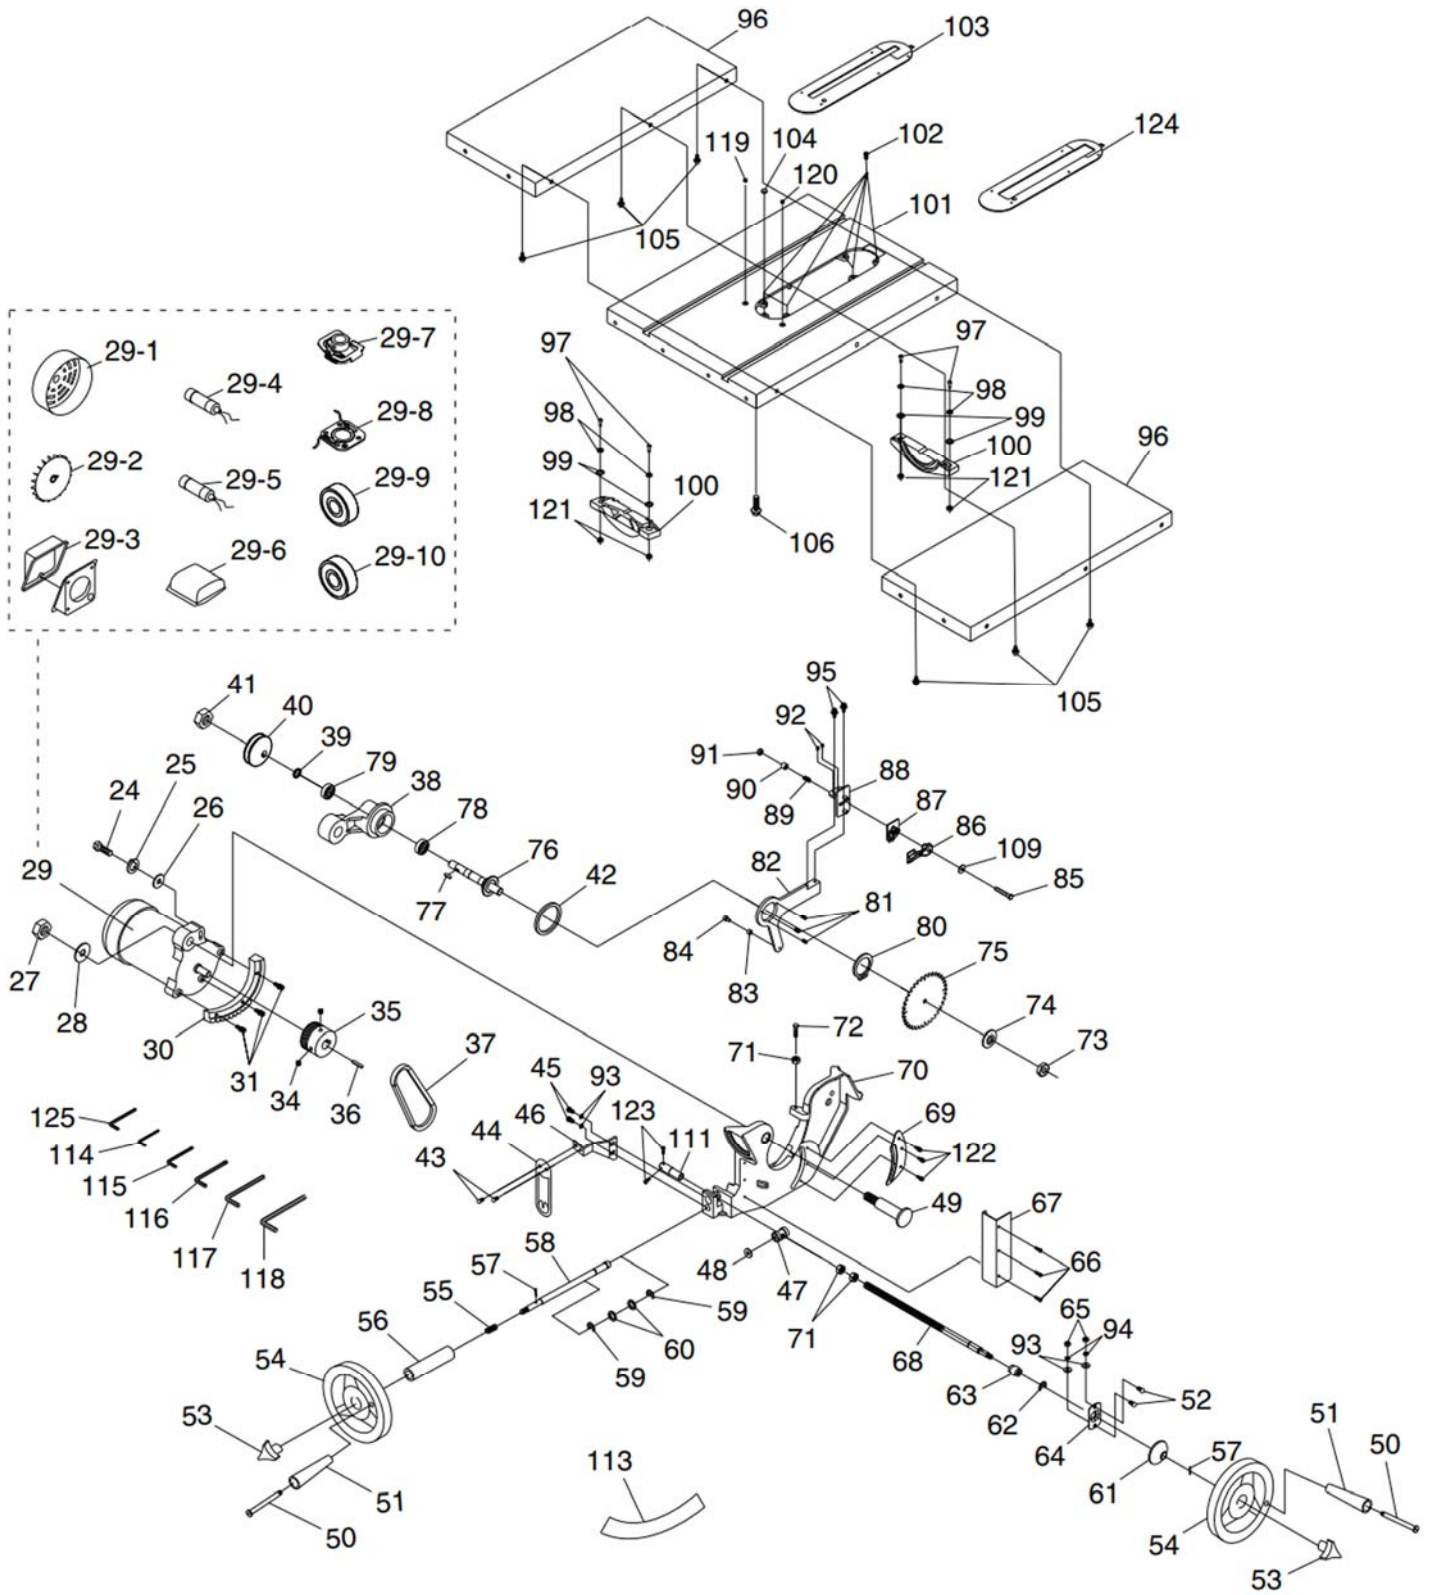


| | |
|-------|---------------------------------------|
| 24 | HEX BOLT M8-1.25 X 30 |
| 25 | LOCK WASHER 8MM |
| 26 | FLAT WASHER 8MM |
| 27 | LOCK NUT M16-2 |
| 28 | FLAT WASHER 16MM |
| 29 | MOTOR 2HP 110V/220V 1-PH |
| 29-1 | MOTOR FAN COVER |
| 29-2 | MOTOR FAN |
| 29-3 | MOTOR JUNCTION BOX |
| 29-4 | R CAPACITOR 30M 350V 1-5/8 X 3-1/8 |
| 29-5 | S CAPACITOR 200M 150V 1-3/8 X 2-11/16 |
| 29-6 | CAPACITOR COVER |
| 29-7 | CENTRIFUGAL SWITCH |
| 29-8 | CONTACT PLATE |
| 29-9 | BALL BEARING 6203ZZ |
| 29-10 | BALL BEARING 6202ZZ |
| 30 | BULL GEAR |
| 31 | CAP SCREW W/WASHER M6-1 X 25 |
| 34 | SET SCREW M5-.8 X 8 |
| 35 | MOTOR PULLEY J6 X 5/8" BORE |
| 36 | KEY 5 X 5 X 30 |
| 37 | POLY-V BELT 355J6 |
| 38 | BLADE BRACKET |
| 39 | ARBOR BUSHING |
| 40 | ARBOR PULLEY |
| 41 | LOCK NUT M12-1.5 |
| 42 | SHIM WASHER |
| 43 | PHLP HD SCR M4-.7 X 6 |
| 44 | BEVEL INDICATOR |
| 45 | CAP SCREW M5-.8 X 8 |
| 46 | POINTER SEAT |
| 47 | BEVEL NUT |
| 48 | SHIM WASHER |
| 49 | MAIN TRUNNION SHAFT |
| 50 | HANDLE BOLT M8-1.25 X 120 |
| 51 | HANDWHEEL HANDLE 106MM SS |
| 52 | CAP SCREW M5-.8 X 16 |
| 53 | LOCK HANDLE M8-1.25 |
| 54 | HNDWHL TYPE 1 180D X 11B-K X M8-1.25 |
| 55 | COMPRESSION SPRING |
| 56 | ELEVATION BUSHING |
| 57 | ROLL PIN 3 X 20 |
| 58 | ELEVATION SHAFT |
| 59 | E-CLIP 14MM |
| 60 | SPACER |
| 61 | BEVEL PLATE |
| 62 | E-CLIP 9MM |
| 63 | SWIVEL BUSHING |
| 64 | BEARING SEAT |
| 65 | HEX NUT M5-.8 |
| 66 | CAP SCREW M5-.8 X 10 |
| 67 | BLADE GUARD |
| 68 | TILT SHAFT |

| | |
|-----|-------------------------------------|
| 69 | RIVING GUIDE |
| 70 | MAIN TRUNNION |
| 71 | HEX NUT M8-1.25 |
| 72 | HEX BOLT M8-1.25 X 40 |
| 73 | HEX NUT 5/8-18 |
| 74 | BLADE FLANGE |
| 75 | BLADE 10" X 5/8" X 40T |
| 76 | ARBOR |
| 77 | KEY 5 X 5 X 12 |
| 78 | BALL BEARING 6203ZZ |
| 79 | BALL BEARING 6202ZZ |
| 80 | EXT RETAINING RING 52MM |
| 81 | CAP SCREW M5-.8 X 6 |
| 82 | MOUNTING PLATE |
| 83 | BUSHING |
| 84 | SHAFT PIN |
| 85 | RIVING CLAMP LOCK BOLT M8-1.25 X 53 |
| 86 | RIVING LOCK LEVER |
| 87 | RIVING CLAMP |
| 88 | RIVING DECK |
| 89 | COMPRESSION SPRING |
| 90 | RIVING SEAT |
| 91 | LOCK NUT M8-1.25 |
| 92 | SET SCREW M5-.8 X 10 |
| 93 | FLAT WASHER 5MM |
| 94 | LOCK WASHER 5MM |
| 95 | CAP SCREW W/WASHER M5-.8 X 16 |
| 96 | EXTENSION TABLE |
| 97 | CAP SCREW M10-1.5 X 40 |
| 98 | LOCK WASHER 10MM |
| 99 | FLAT WASHER 10MM |
| 100 | TRUNNION |
| 101 | MAIN TABLE |
| 102 | FLAT HD SCR 8-32 X 1/2 |
| 103 | TABLE INSERT |
| 104 | TABLE INSERT MAGNET |
| 105 | CAP SCREW M10-1.5 X 30 |
| 106 | FLANGE BOLT M8-1.25 X 16 |
| 109 | FLAT WASHER 8MM |
| 111 | 90° LIMITING BLOCK |
| 113 | BEVEL LABEL |
| 114 | HEX WRENCH 3MM |
| 115 | HEX WRENCH 4MM |
| 116 | HEX WRENCH 5MM |
| 117 | HEX WRENCH 6MM |
| 118 | HEX WRENCH 8MM |
| 119 | SET SCR M8-1.25 X 20 CUP-PT NYLOCK |
| 120 | SET SCR M8-1.25 X 25 CUP-PT NYLOCK |
| 121 | HEX NUT M10-1.5 |
| 122 | CAP SCREW W/WASHER M5-.8 X 10 |
| 123 | CAP SCREW M5-.8 X 10 |
| 124 | DADO TABLE INSERT |
| 125 | HEX WRENCH 2.5MM |

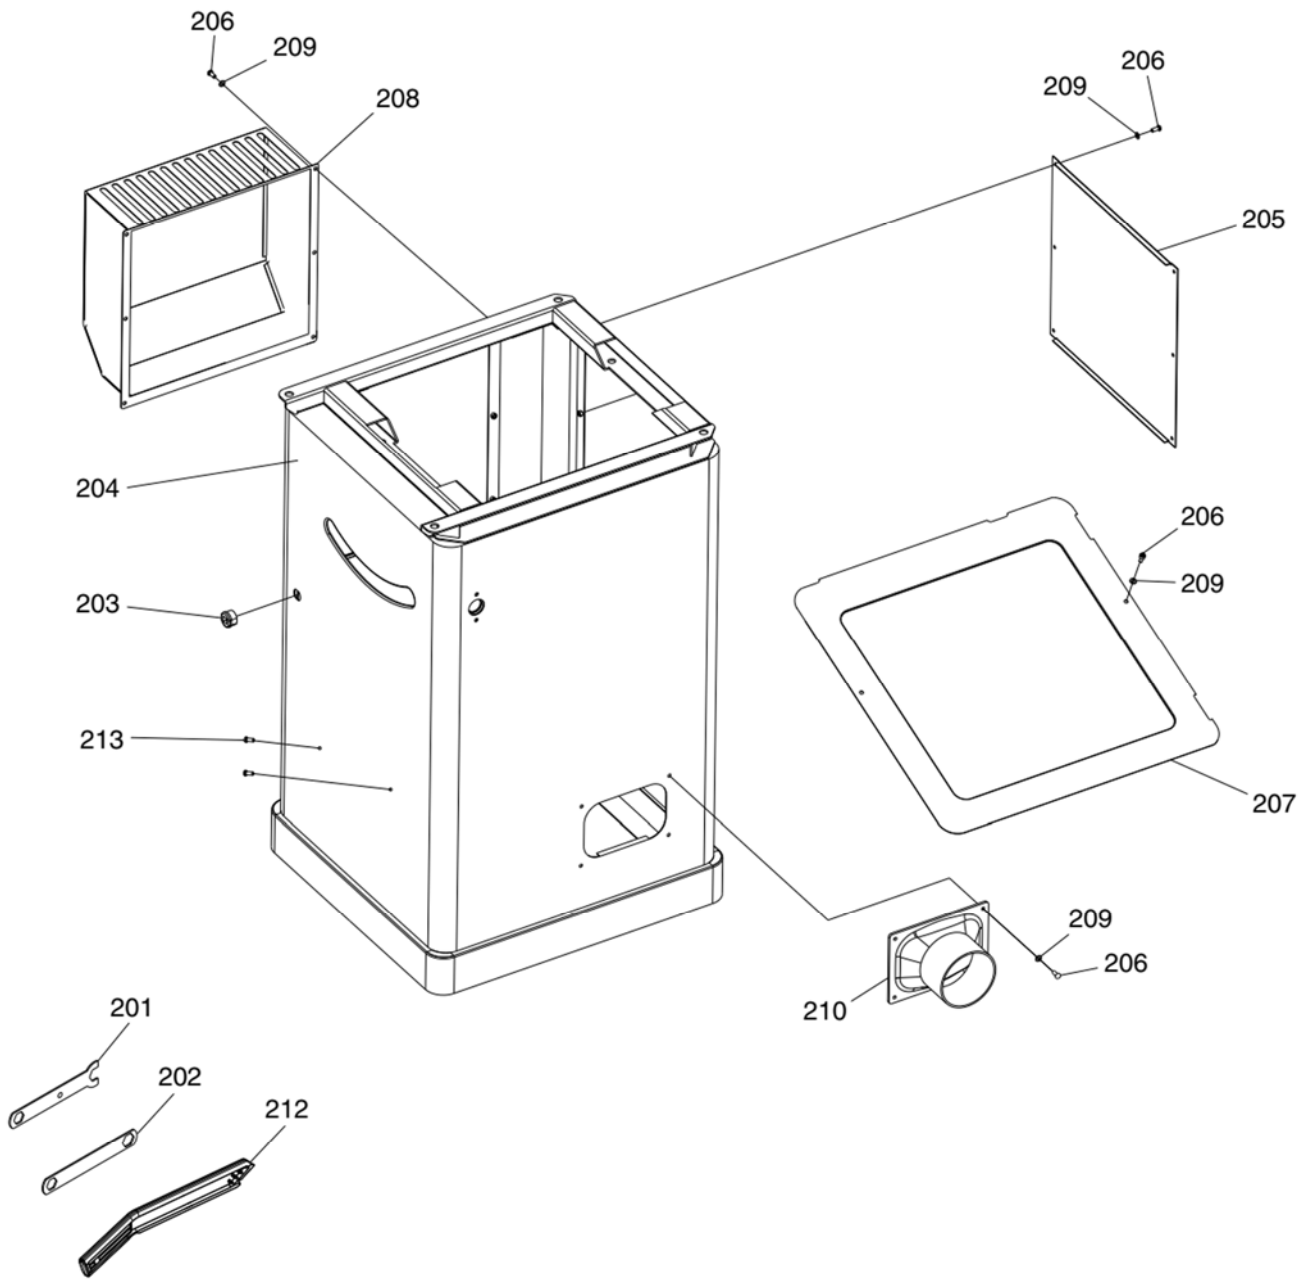


| | |
|-----|------------------------------------|
| 201 | ARBOR WRENCH 16 X 23MM OPEN-END |
| 202 | ARBOR WRENCH 13 X 22MM CLOSED-ENDS |
| 203 | STRAIN RELIEF 1/2"-3/8" SNAP-IN ST |
| 204 | CABINET |
| 205 | REAR PANEL |
| 206 | CAP SCREW M5-.8 X 12 |

| | |
|-----|-----------------------------|
| 207 | DUST COLLECTION GUIDE PLATE |
| 208 | MOTOR COVER |
| 209 | FLAT WASHER 5MM |
| 210 | DUST PORT |
| 212 | PUSH STICK |
| 213 | PHLP HD SCR M3-.5 X 16 |

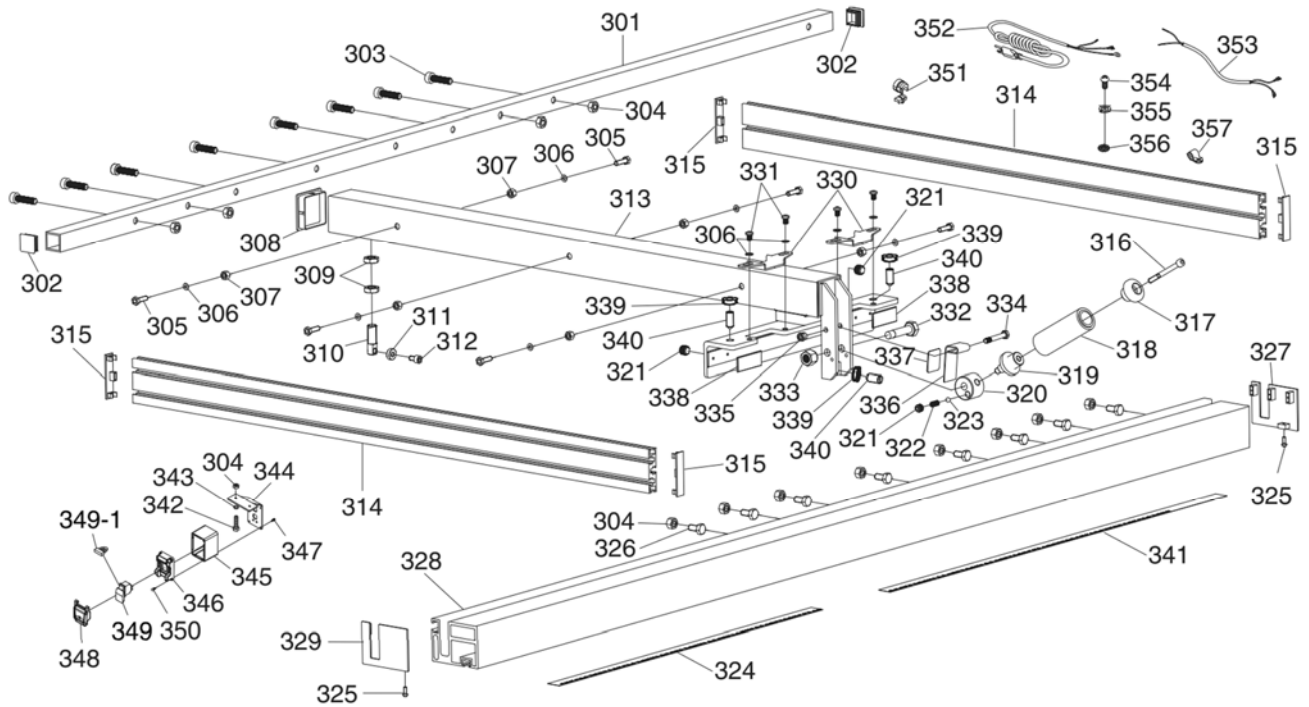


| | |
|-----|--------------------------------------|
| 301 | REAR RAIL |
| 302 | REAR RAIL CAP |
| 303 | CAP SCREW M8-1.25 X 25 |
| 304 | HEX NUT M8-1.25 |
| 305 | HEX BOLT M6-1 X 20 |
| 306 | FLAT WASHER 6MM |
| 307 | HEX NUT M6-1 |
| 308 | FENCE ASSEMBLY CAP |
| 309 | HEX NUT M12-1.75 THIN |
| 310 | LIMIT SHAFT M12-1.75 X 25, 40L |
| 311 | BALL BEARING 696-2RS |
| 312 | CAP SCREW M6-1 X 12 |
| 313 | FENCE BASE ASSEMBLY |
| 314 | FENCE FACE |
| 315 | FENCE FACE CAP |
| 316 | CAP SCREW M8-1.25 X 85 |
| 317 | FENCE HANDLE END COVER |
| 318 | FENCE HANDLE 19ID X 32OD X 90L |
| 319 | HANDLE BASE SCR M8-1.25 X 8, 11 X 11 |
| 320 | FENCE HANDLE CAM |
| 321 | SET SCREW M8-1.25 X 8 |
| 322 | COMPRESSION SPRING .8 X 5 X 15 |
| 323 | STEEL BALL 6MM |
| 324 | SCALE LABEL LEFT |
| 325 | TAP SCREW 3.5 X 8 |
| 326 | HEX BOLT M8-1.25 X 25 |
| 327 | FRONT RAIL CAP RIGHT |
| 328 | FRONT RAIL |
| 329 | FRONT RAIL CAP LEFT |

| | |
|-------|-------------------------------------|
| 330 | INDICATOR |
| 331 | PHLP HD SCREW M6-1 X 8 |
| 332 | HEX BOLT M10-1.5 X 45 |
| 333 | LOCK NUT M10-1.5 |
| 334 | HEX BOLT M6-1 X 40 |
| 335 | LOCK NUT M6-1 |
| 336 | SPRING PLATE |
| 337 | SLIDE PLATE 30 X 24 X 2 |
| 338 | SLIDE PLATE 50 X 20 X 2 |
| 339 | KNURLED NUT M10-1.5 |
| 340 | SET SCREW M10-1.5 X 17, PLASTIC TIP |
| 341 | SCALE LABEL RIGHT |
| 342 | HEX BOLT M8-1.25 X 16 |
| 343 | LOCK WASHER 8MM |
| 344 | SWITCH BRACKET |
| 345 | SWITCH BOX |
| 346 | SWITCH PANEL |
| 347 | TAP SCREW M4 X 14 |
| 348 | SWITCH PADDLE |
| 349 | SWITCH KEDU HY18-20 |
| 349-1 | SWITCH KEY |
| 350 | TAP SCREW M4 X 20 |
| 351 | STRAIN RELIEF 1/2"-3/8" SNAP-IN ST |
| 352 | POWER CORD 14G 3W 72" 5-15P |
| 353 | MOTOR CORD 14G 3W 39" |
| 354 | PHLP HD SCR M5-.8 X 8 |
| 355 | LOCK WASHER 5MM |
| 356 | INT TOOTH WASHER 5MM |
| 357 | ADJUSTABLE CABLE CLAMP |

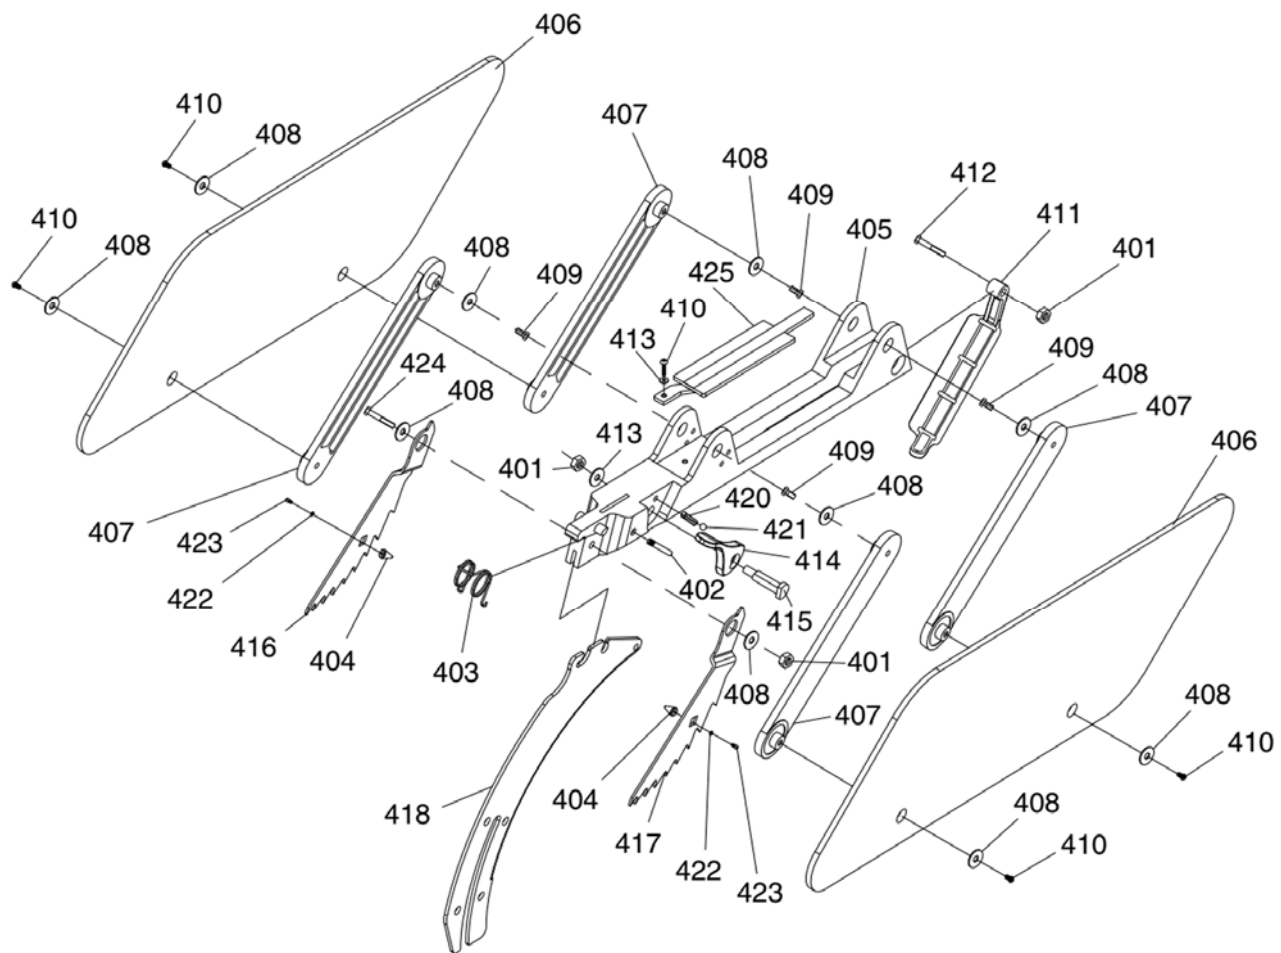

| | |
|-----|------------------------|
| 401 | LOCK NUT M5-.8 |
| 402 | SET PIN |
| 403 | TORSION SPRING |
| 404 | SCREW CAP |
| 405 | BLADE GUARD BODY |
| 406 | BARRIER |
| 407 | BARRIER CONNECTING BAR |
| 408 | FLAT WASHER 5MM |
| 409 | HEX BOLT M5-.8 X 10 |
| 410 | PHLP HD SCR M5-.8 X 10 |
| 411 | GUARD RAIL |
| 412 | PHLP HD SCR M5-.8 X 25 |

| | |
|-----|------------------------------|
| 413 | FLAT WASHER 5MM |
| 414 | BLADE GUARD LOCK LEVER |
| 415 | BLADE GUARD LOCK LEVER SCREW |
| 416 | ANTI-KICKBACK PAWL (L) |
| 417 | ANTI-KICKBACK PAWL (R) |
| 418 | SPREADER/RIVING KNIFE |
| 420 | COMPRESSION SPRING |
| 421 | STEEL BALL 4MM |
| 422 | FLAT WASHER 3MM |
| 423 | TAP SCREW M3 X 6 |
| 424 | CAP SCREW M5-.8 X 30 |
| 425 | BLADE GUARD WINDOW COVER |

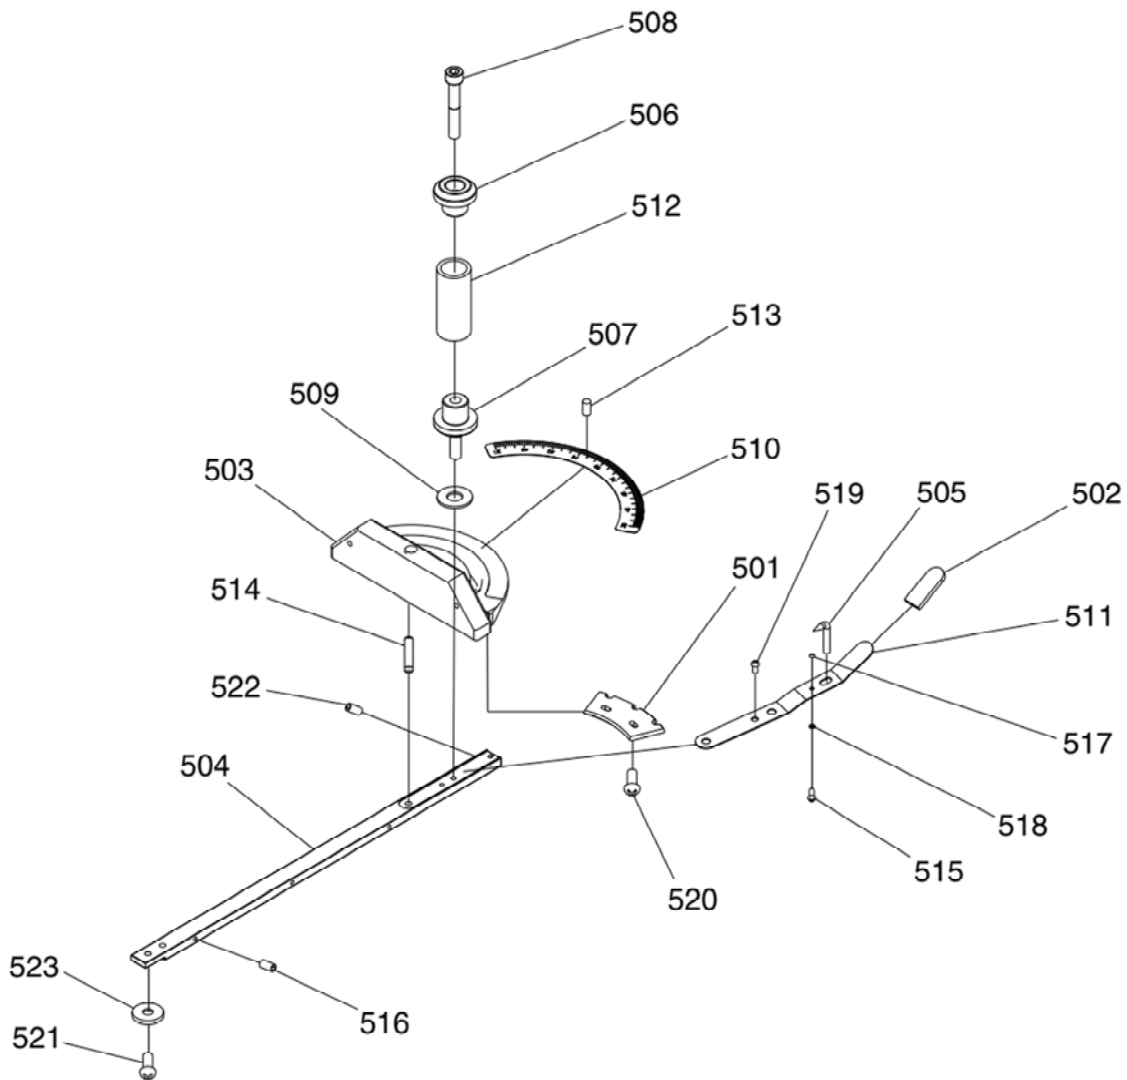

| | |
|-----|------------------------|
| 501 | FLAT PLATE |
| 502 | SPRING PLATE COVER |
| 503 | MITER GAUGE BODY |
| 504 | MITER BAR |
| 505 | ANGLE INDICATOR |
| 506 | UPPER HANDLE CAP |
| 507 | LOWER HANDLE CAP |
| 508 | CAP SCREW M8-1.25 X 50 |
| 509 | HANDLE WASHER 6 X 20 |
| 510 | MITER SCALE |
| 511 | SPRING PLATE |
| 512 | MITER HANDLE |

| | |
|-----|---------------------------|
| 513 | RIVET |
| 514 | MITER PIN |
| 515 | FLAT HD SCR 4-40 X 3/16 |
| 516 | SET SCREW 10-24 X 1/2 |
| 517 | THREADED STOP PIN |
| 518 | FLAT WASHER 3MM |
| 519 | PHLP HD SCR 10-32 X 1/4 |
| 520 | PHLP HD SCR 6-32 X 7/16 |
| 521 | FLAT HD SCR 1/4-28 X 5/16 |
| 522 | SET SCREW 10-32 X 1/4 |
| 523 | MITER BAR GUIDE WASHER |



WARRANTY

CRAFTEX 3 YEAR LIMITED WARRANTY

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers **three years** for parts and 90 days for labour (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

Proof of purchase is necessary.

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras.

Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

RETURNS, REPAIRS AND REPLACEMENTS

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom or call 1-800-461-BUSY. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY (2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- We do not accept *collect* shipments.
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.